


CONTOUR-CUT DECAL INSTALLATION

1. Clean surface (“Preparation” on side-bar) to remove dirt, grime, bugs, etc.
2. Without removing the paper backing, position the decal exactly where you want it.
3. Once the decal is in position, place a piece of masking tape along the top edge to hold it in place.



4. The decal should be sitting on the surface like a flap. Lift up the decal (A) and remove the paper backing (B).

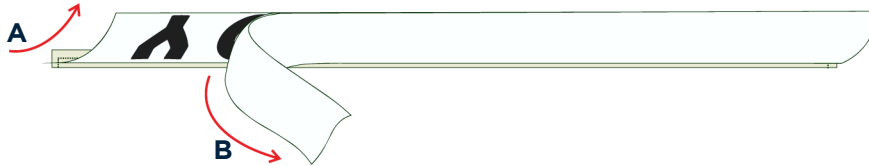

5. With the backing paper completely removed from the decal and transfer tape, gently lower the decal with the transfer tape back down to the surface and rub it down lightly with your hand.



6. Take a squeegee or credit card and firmly rub the decal down to the surface. The transfer tape should still be on the decal - this allows you to rub the decal down without scratching or damaging the decal.



7. Finally, gently peel off the transfer tape and masking tape. The decal will adhere to the surface much more aggressively than the transfer tape, which should lift easily and not leave behind any sticky residue.

YOUR DECAL

8. Your decal installation is complete! If there are any air bubbles present that cannot be removed by working them to the edge with your finger or a squeegee, a small needle or pin can be used to puncture the bubble and remove the air. A small pin-hole will not be seen after the air bubble has been worked out.

NOTE:

White RTA Vinyl Decals may be supplied on a colored liner for improved visibility. Clear pre-masking is also available on some items. While different liners and pre-masks may have different release properties, all material types will release successfully following the steps specified above.

Contour-cut Decals are made with a pre-spaced, plotter-cut process. When applied, the finished product looks like individual letters and/or images.

PREPARATION

Prepare surface by washing with a mild soap and water solution. Do not use soaps or detergents that contain creams or lotions. Once surface is free of dirt & oils, dry thoroughly with a lint free cloth.

TEMPERATURE

It is recommended that the air and application surface are both a minimum of 50° (F).

PAINTED SURFACE

If the surface is freshly painted, please allow proper curing of paint before applying the decals.

(Refer to the paint manufacturer for curing times)

PREP QUESTIONS

If you have any questions about preparing your surface for decal installation, please give us a call, or send an email to sales@conceptonetn.com

concept one
SIGNS • AWARDS • APPAREL

conceptonetn.com
615.452.2900