

# Pro Cut Decal Installation


Decals are made with a per-spaced die-cut process. When applied, finished product looks like individual letters.

Prepare surface by washing with a mild soap and water solution. Do not use soaps or detergents that contain creams or lotions. Once surface is free of dirt & oils, dry thoroughly with a lint free cloth.

It is recommended that the air and application surface are both a minimum of 50 Degrees (F).

If the surface is freshly painted, please allow proper curing of paint before applying the decals.  
(Refer to the paint manufacturer for curing times)

## Quick And Easy To Apply...

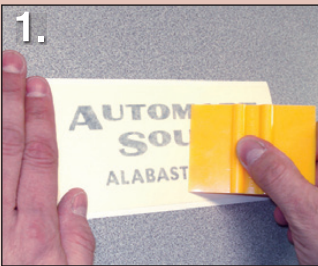

1. Lay decal **FACE UP** on a smooth hard surface. Squeegee the surface to ensure good contact between the pre-mask and the vinyl beneath it.



2. Lay decal flat **FACE DOWN**. Slowly remove backing paper from the pre-mask, pulling straight back and flat as shown (not at an angle).



3. Apply pressure-sensitive vinyl to prepared surface, then squeegee pre-mask surface using overlapping strokes.



4. To expose product, pull pre-masking away at an angle as shown above, using a continuous motion. If bubbles occur in the letters, simply prick with a needle and smooth. Do not use a knife or razor.

Note: White Pro-Cuts may be supplied on a colored liner for improved visibility. Clear pre-mask is also available on some items. While different liners and pre-masks may have different release properties, all material types will release successfully following the steps specified above.